

Instructions for Bucket Lid and Wheels

Sealing the Bucket

The water-tight lid fits very tightly, and installing the lid on the first time requires some force. Once it is on the bucket overnight, it will be much easier to install thereafter.



1. Place the lid on the bucket
2. Push down one of the corners until it slots into place



3. Push down on the next corner until it slots into place, and again for the next two corners. The 4th corner will be the hardest, just push it firmly into place.

Installing the wheels



1. Flip the bucket so the holes on the base of the bucket are facing up.



2. Place a sleeve in each of the holes, pushing down gently. Turn bucket upright.



3. Tap all 4 sleeves against the floor to firmly seat the sleeves into the bottom of the bucket.



4. Flip the bucket with lid side on the floor to install the wheels.



5. Place the wheels stem into the sleeve and using your thumb, push down firmly on the metal directly over the stem (not on the rubber wheel). See white arrow for metal area to apply pressure. The metal stem should no longer be visible when properly seated.
6. Repeat with remaining 3 wheels.

